

Front lens / assembly detail


Shared P07 eye frame - print two. All dimensions in mm.

INTEGRATED INTO THE MAIN ASSEMBLY

Accepted inset smile R4 and smooth goggles R5 retained; concealed groove added.

The exterior frame and its front aperture are unchanged. No insertion slit.

FRONT PROFILES / 5:1

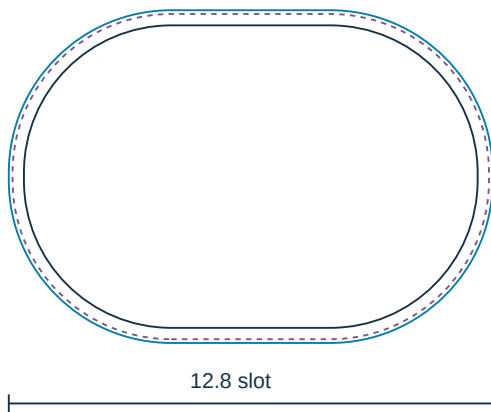

Front aperture: 12 x 8, R3.9


Slot envelope: 12.8 x 8.8, R4.3

Film A: 12.6 x 8.6, R4.2

Profiles centered at local Y = 0.

Film has 0.3 nominal edge overlap.

WALL SECTION AT THE TOP OF THE APERTURE / 15:1



Slot Z: -3.4 to -3.0

0.4 axial height x 0.4 radial depth

Front lip depth: 0.6

Film sketch at Z = -3.2; thickness unspecified.

FRONT / Z = -4.0

CUT FILM, DO NOT PRINT

Gently bow thin flexible film into the internal groove behind the front rim.


The hidden native construction sketch is a reference in both P07 instances.

Anthony reports the printed trial "worked". Film thickness, selected cut size and insertion cycle count were not recorded. This is not a measured durability test.

Film cutting template / 1:1

Print at 100% / Actual size. Disable Fit to page. Cut TWO matching pieces.

VERIFY THE SCALE BEFORE CUTTING



10 x 10 mm check square

Measure the bar with a ruler. The outlines below are actual size.

A / Start here



12.6 x 8.6 mm / R4.2

Cut on the center of each thin outline.

B / Use if A is loose



12.7 x 8.7 mm / R4.25

Cut on the center of each thin outline.

C / Use if A is tight



12.5 x 8.5 mm / R4.15

Cut on the center of each thin outline.

Use thin flexible clear film. Retain the successful material if known.

Gently bow into the slot; check seating around the full perimeter.

The 14 x 10 rear film blank is NOT the blank for this front slot.

A is a starting cut, not a recorded measurement of the successful printed trial.

No film thickness is specified or implied by this drawing.